



BASKET ASSEMBLY INSTRUCTIONS

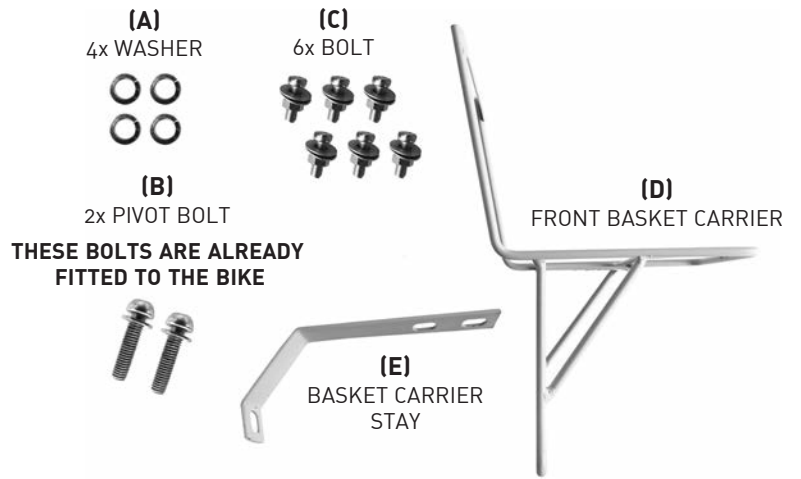

STEP 01

1.1

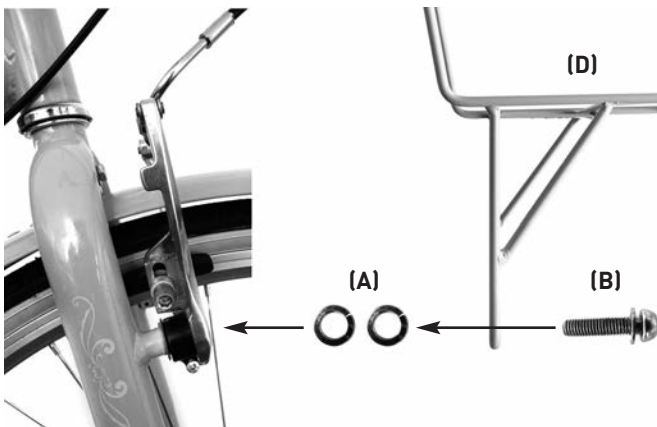

Remove both (B) pivot bolts from the bike brake calipers making sure the calipers stay in position **NOT REMOVED**. Attach 2x (A) washers behind the (D) front basket carrier and in front as shown in (1.1) to (B) the pivot bolts.

Screw back both (B) pivot bolts into each brake caliper turning gradually either side until fully tightened.

1.2




STEP 02

2.1




Attach the (E) basket carrier stay to the front of the fork using the existing bolt which holds the front mudguard as shown in (2.1). Then fix the (E) basket carrier stay to the (D) front basket carrier using 2x (c) bolts as shown in (2.2/2.3)

2.2

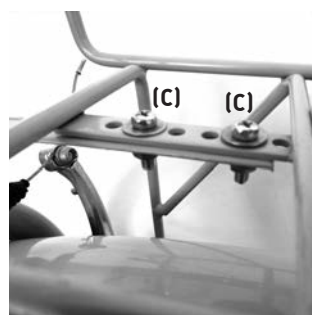

2.3

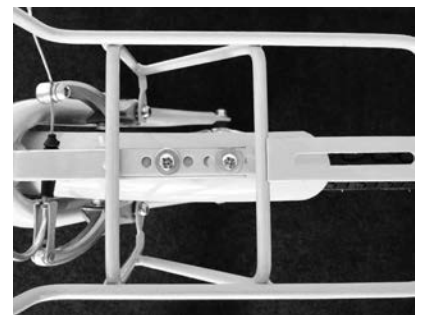

STEP 03

3.1



3.2



Finally attach the basket to the (D) front basket carrier by using 4x (c) bolts as shown in (3.2).

Double check all bolts are securely fastened before use.

Max load 5kgs